

Features


- Intrinsically safe
- Rugged
- 100 Hz operation
- Software selectable trigger modes and threshold levels
- Programmable start time
- Real-time operation
- 1/4" NPT pressure port



Applications

- Oil and gas applications
- Water hammer
- Compressors
- Pumps
- Pneumatics
- Process control systems
- Lubrication systems
- Chemical processing
- Pulp and paper processing
- Waste water treatment
- HVAC

It is an all too common paradox: you need to capture transient events at a high sample rate but the events of interest are erratically spread over a long period of time. The PRTrans1000IS is the pressure recorder to solve your problems. It samples up to 100Hz (10ms) but it will only trigger on pressure limits that you set beforehand. You can start the trigger on high and/or low thresholds and end the trigger after either a chosen number of samples, or when the signal crosses over your stop threshold. The device can record up to 255 events and take as many as 262,143 pressure samples. The recorder also shows up to 32 samples of "pre-trigger" data so you might learn what caused the trigger in the first place. The PRTrans1000IS has been Factory Mutual certified as intrinsically safe for Class I, Division 1, groups A, B, C and D and non-incendive for Class I, Division 2, groups A, B, C and D. This certification makes the device ideal for uses in hostile environment applications. The PRTrans1000IS is a battery operated unit with a standard 1/4" NPT for easy coupling to your pressure systems. The non-volatile memory will retain your valuable data even if the user-replaceable battery becomes discharged. The PRTrans1000IS: your solution to the transient pressure problem.

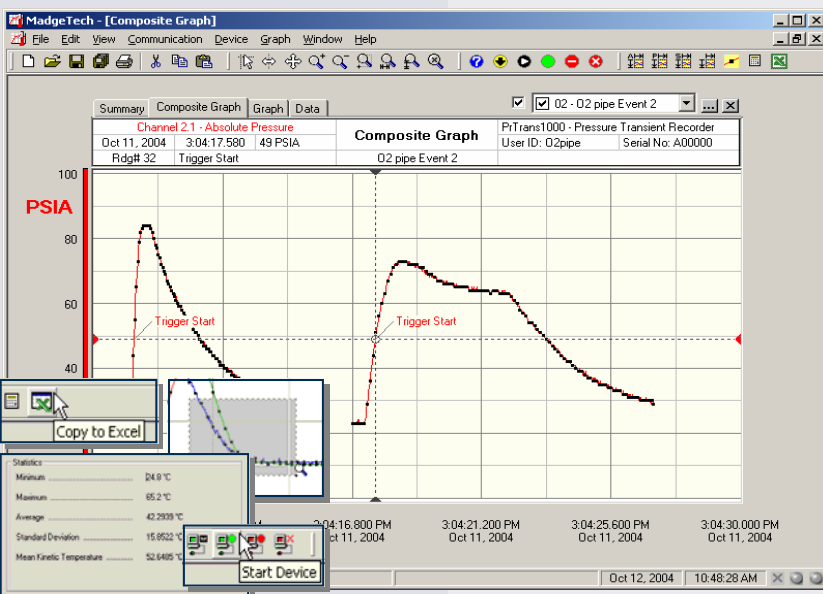

MadgeTech Data Recorder Software

displays pressure data in an easy to use graph.

The Windows®-based software package allows the user to effortlessly collect, display and analyze data. A variety of powerful tools allow you to examine, export, and print professional looking data with just a click of the mouse.

Click [MadgeTech Software](#) for more information or to download the software.

PRTRANS1000IS SPECIFICATIONS*

Pressure Sensor: Semiconductor strain gauge	Reading Rate: 1 reading every 10ms to 1 every second
Pressure Range: 0 to 30, 100, 300, 500 PSIA/G; 0 to 1000, 5000 PSIA	Calibration: Digital calibration through software
Pressure Resolution: 0.02, 0.1, 0.2, 0.5 PSIA/G; 1.0, 5.0PSIA	Calibration Date: Automatically recorded within device
Calibrated Accuracy: 2%FSR, .25% @ 25°C typical	Battery Type: 3.6V lithium battery included; user replaceable
Pressure Response Time: 0.1 ms (10 to 90%FSR)	Battery Life: 3 days continuous @ 10ms sample rate
Repeatability: ±0.5%FSR; ±0.2% typical	Shelf Life: Up to 1 year when device is not in use
Adaptor: 1/4" male NPT	Data Format: Date and time stamped PSIA(G), inches, feet, mmHg, bar, Torr, kPa
Trigger Modes: Software programmable window size or bi-level start/stop triggers.	Computer Interface: PC serial or USB (interface cable required); 115,200 baud
Start Modes: Software programmable immediate start or delay start up to seven days in advance	Software: Windows 95/98/ME/NT/2000/XP based software
Real Time Recording: May be used with PC to monitor and record data in real time	Operating Environment: -40 to +80°C, 0 to 100%RH
Memory: 262,143 samples	Dimensions: 6.4" x 1.25" dia. (163mm x 32mm dia.)
Number of Events: Up to 255 triggered events	Weight: 12 oz (340 g)
Pre-trigger size: Up to 32 samples	Material: Stainless Steel
	Approvals: CE FM Certified Intrinsically Safe for Class I, Division 1 groups A, B, C and D

BATTERY WARNING: RISK OF FIRE OR EXPLOSION. DO NOT RECHARGE,
FORCE OPEN, HEAT OR DISPOSE OF IN FIRE.

SOFTWARE FEATURES

Multiple Graphs: Simultaneously analyze data from several units or deployments; easily switch to a single data series	Statistics: Calculate averages, min, max, standard deviation, and mean kinetic temperature with the touch of a button
Graphical Cursor: One click displays readings by time, value, parameter or sample number	Export Data: Export data in a variety of common formats, or switch to Excel® with a single click
Data Table: Instantly access tabular view for detailed dates, times, values, and annotations	Calibration: Automatically calculate and store calibration parameters
Scaling Options: Autoscale function fits data to the screen, or allows user to manually enter their own values	Logger Configuration: Easy set up and launch of data loggers with immediate or delayed start, preferred sample rate, and device ID
Formatting Options: Change colors, line styles, plotting options, show or hide channels quickly	Communications: Automatically sets up communications port, or lets user select configuration

*SPECIFICATIONS ARE SUBJECT TO CHANGE WITHOUT NOTICE.
SPECIFIC WARRANTY AND REMEDY LIMITATIONS APPLY.
CALL 1-603-456-2011 OR GO TO WWW.MADGETECH.COM FOR DETAILS.

ORDERING INFORMATION

Model	Description	Price
PRTRANS1000IS-30	0-30PSIA(G) Intrinsically Safe Pressure and Temperature Recorder	Call for Pricing
PRTRANS1000IS-100	0-100PSIA(G) Intrinsically Safe Pressure and Temperature Recorder	
PRTRANS1000IS-300	0-300PSIA(G) Intrinsically Safe Pressure and Temperature Recorder	
PRTRANS1000IS-500	0-500PSIA(G) Intrinsically Safe Pressure and Temperature Recorder	
PRTRANS1000IS-1000	0-1000PSIA Intrinsically Safe Pressure and Temperature Recorder	
PRTRANS1000IS-5000	0-5000PSIA Intrinsically Safe Pressure and Temperature Recorder	
IFC110	Software, manual and RS232 interface cable	
IFC200	Software, manual and USB interface cable	
NIST	N.I.S.T. Calibration Certificate	
TL-2150	Replacement battery for PRTrans1000IS	

ASK ABOUT OUR OTHER DATA RECORDERS

Temperature	Pulse/Event/State
Humidity	Low Level Current
Pressure	Low Level Voltage
pH	RF Transmitters
Level	Intrinsically Safe
Shock	Spectral Vibration